

**Election Tips for the TSX**

**The Mississippi Secretary of State's  
Office, Elections Division  
2012**

Prepared and presented by:  
*Derrick Cooper, Elections Systems Training Specialist*



**DELBERT HOSEMANN**  
*Secretary of State*

---

---

---

---

---

---

---

---

**Agenda**

- Election Prep Tips
- Election Prep/Election Day Tips
- Election Night Tips
- Questions/Answers



**DELBERT HOSEMANN**  
*Secretary of State*

---

---

---

---

---

---

---

---



**DELBERT HOSEMANN**  
*Secretary of State*

---

---

---

---

---

---

---

---

**Election Prep**

**The Poll Managers Notebook Includes:**

- Forms/Poll Managers Guide
- Contact Names and Numbers
- Address Library List
- Trouble-shooting Section

  
DELBERT HOSEMANN  
Secretary of State

---

---

---

---

---

---

---

---

**Election Day Prep**

**TSX calibration is off:**

- Clean screen using an electronic solution.
- Go into System Setup with CA card.
- Go to Display Settings and recalibrate.
- If machine still will not hold calibration, call the ES&S help desk.

  
DELBERT HOSEMANN  
Secretary of State

---

---

---

---

---

---

---

---

**Prep/Election Day**

**TSX printer will not work:**

- Make sure smoky gray cover is closed all of the way (listen for click).
- Make sure paper is installed properly (Please note: Thermal paper only prints on one side).

  
DELBERT HOSEMANN  
Secretary of State

---

---

---

---

---

---

---

---

**Election Day**

**Check the power lights on the TSX:**

- Top Green light shows A/C Power.
- Middle blue light shows machine is on.
- Bottom flashing light – yellow means battery is charging and green means battery is charged.

  
DELBERT HOSEMANN  
Secretary of State

---

---

---

---

---

---

---

---

**Election Day**

**TSX on battery power may not recognize the memory card:**

- You may need to restart the TSX with the memory card in and A/C power connected.

  
DELBERT HOSEMANN  
Secretary of State

---

---

---

---

---

---

---

---

**Election Day**

**Location of the Poll Managers providing Voter Access Cards:**

- There must be a connection between the voter signing the Receipt Book and the poll manager issuing the card.
- Do not create Voter Access Cards in advance.

  
DELBERT HOSEMANN  
Secretary of State

---

---

---

---

---

---

---

---

**Election Day**

**Voter is not in the poll book:**

- This voter cannot vote on the TSX.
- This voter cannot vote on a REGULAR paper ballot.

  
DELBERT HOSEMANN  
*Secretary of State*

---

---

---

---

---

---

---

---

**Election Day**

**Use of Supervisor Cards:**

- Should be used to change the machine paper, clear certain paper jams and close or shutdown the machine at the end of the election.
- Inserting a Supervisor Card in an encoder will clear all ballots styles on the encoder.

  
DELBERT HOSEMANN  
*Secretary of State*

---

---

---

---

---

---

---

---

**Election Day**

**Placement of the TSX machines:**

- Machine must be turned to allow privacy for the voter.

  
DELBERT HOSEMANN  
*Secretary of State*

---

---

---

---

---

---

---

---

**Election Day**

**Smart card is stuck in TSX:**

- Reboot TSX machines and the card should pop out.
- Clean any debris from card using an electronic wipe (while avoiding the metal smart chip).

  
DELBERT HOSEMANN  
Secretary of State

---

---

---

---

---

---

---

---

**Election Day**

**TSX 'Freezes-up':**

- Remove the seal, power the unit off and then on again (reboot). Reseal and record seal number and reason.

(continued)

  
DELBERT HOSEMANN  
Secretary of State

---

---

---

---

---

---

---

---

**Election Day**

**Voting after TSX Reboot:**

- Re-insert the Voter Access Card and read the message:
  - Card already voted – the ballot was cast before the freeze.
  - Card was cancelled – re-code the card and allow the voter to continue voting.

  
DELBERT HOSEMANN  
Secretary of State

---

---

---

---

---

---

---

---

### Election Day

**Encoder Screen keeps fading in and out:**

- Replace batteries (be careful not to apply too much force when installing the screws that hold the cover).
- Turn the encoder off when it is not in use.
- Do not leave card in encoder, even if it is off.



DELBERT HOSEMANN  
Secretary of State

---

---

---

---

---

---

---

---

### Election Night

**While closing out the election:**

- Remove the memory card as soon as the result tape is printed. With the memory card removed, only two options remain: to "Shut Down TSX" or go to "Election Archives."



DELBERT HOSEMANN  
Secretary of State

---

---

---

---

---

---

---

---

### Election Night

**Don't Panic.**

- If the Poll Manager presses shutdown on the TSX before all the close out procedures are complete, just turn it back on and the system will start back at the place you left off.



DELBERT HOSEMANN  
Secretary of State

---

---

---

---

---

---

---

---

**Questions and Answers**



DELBERT HOSEMANN  
*Secretary of State*

---

---

---

---

---

---

---

---

**Contact Information**  
The Mississippi Secretary of State's Office, Elections Division  
Heath Hillman, Assistant Secretary of State, Elections

P.O. Box 136  
Jackson, MS 39205  
Elections Hotline (800)829-6786  
601-359-1350  
[www.sos.ms.gov](http://www.sos.ms.gov)

Derrick Cooper  
MS Secretary of State's Office  
Phone: 601-359-1348  
Email: [derrick.cooper@sos.ms.gov](mailto:derrick.cooper@sos.ms.gov)  
Fax: 601-359-5019



DELBERT HOSEMANN  
*Secretary of State*

---

---

---

---

---

---

---

---