

Election Tips for the TSX

Presented By: The Mississippi
Secretary of State's Office, Elections
Division

2013 Municipal Elections
Certification Training



DELBERT HOSEMANN
Secretary of State

Agenda

- Election Prep Tips
- Election Prep/Election Day Tips
- Election Night Tips
- Questions/Answers



DELBERT HOSEMANN
Secretary of State



DELBERT HOSEMANN
Secretary of State

Election Prep

The Poll Managers Notebook
Includes:

- Forms/Poll Managers Guide
- Contact Names and Numbers
- Address Library List
- Trouble-shooting Section



DELBERT HOSEMANN
Secretary of State

Election Day Prep

TSX calibration is off:

- Clean screen using an electronic solution.
- Go into System Setup with CA card.
- Go to Display Settings and recalibrate.
- If machine still will not hold calibration, call the ES&S help desk.



DELBERT HOSEMANN
Secretary of State

Prep/Election Day

TSX printer will not work:

- Make sure smoky gray cover is closed all of the way (listen for click).
- Make sure paper is installed properly (Please note: Thermal paper only prints on one side).



DELBERT HOSEMANN
Secretary of State

Election Day

Check the power lights on the TSX:

- Top Green light shows A/C Power.
- Middle blue light shows machine is on.
- Bottom flashing light – yellow means battery is charging and green means battery is charged.



DELBERT HOSEMANN
Secretary of State

Election Day

TSX on battery power may not recognize the memory card:

- You may need to restart the TSX with the memory card in and A/C power connected.



DELBERT HOSEMANN
Secretary of State

Election Day

Location of the Poll Managers providing Voter Access Cards:

- There must be a connection between the voter signing the Receipt Book and the poll manager issuing the card.
- Do not create Voter Access Cards in advance.



DELBERT HOSEMANN
Secretary of State

Election Day

Voter Is not in the poll book:

- This voter cannot vote on the TSX.
- This voter cannot vote on a REGULAR paper ballot.



DELBERT HOSEMANN
Secretary of State

Election Day

Use of Supervisor Cards:

- Should be used to change the machine paper, clear certain paper jams and close or shutdown the machine at the end of the election.
- Inserting a Supervisor Card in an encoder will clear all ballots styles on the encoder.



DELBERT HOSEMANN
Secretary of State

Election Day

Placement of the TSX machines:

- Machine must be turned to allow privacy for the voter.



DELBERT HOSEMANN
Secretary of State

Election Day

Smart card is stuck in TSX:

- Reboot TSX machines and the card should pop out.
- Clean any debris from card using an electronic wipe (while avoiding the metal smart chip).



DELBERT HOSEMANN
Secretary of State

Election Day

TSX 'Freezes-up':

- Remove the seal, power the unit off and then on again (reboot). Reseal and record seal number and reason.

(continued)



DELBERT HOSEMANN
Secretary of State

Election Day

Voting after TSX Reboot:

- Re-insert the Voter Access Card and read the message:
 - Card already voted – the ballot was cast before the freeze.
 - Card was cancelled – re-code the card and allow the voter to continue voting.



DELBERT HOSEMANN
Secretary of State

Election Day

Encoder Screen keeps fading in and out:

- Replace batteries (be careful not to apply too much force when installing the screws that hold the cover).
- Turn the encoder off when it is not in use.
- Do not leave card in encoder, even if it is off.



DELBERT HOSEMANN
Secretary of State

Election Night

While closing out the election:

- Remove the memory card as soon as the result tape is printed. With the memory card removed, only two options remain: to "Shut Down TSX" or go to "Election Archives."



DELBERT HOSEMANN
Secretary of State

Election Night

Don't Panic.

- If the Poll Manager presses shutdown on the TSX before all the close out procedures are complete, just turn it back on and the system will start back at the place you left off.



DELBERT HOSEMANN
Secretary of State

Questions and Answers



DELBERT ROSEMANN
Secretary of State

Contact Information
*The Mississippi Secretary of State's Office,
Elections Division
Kim Turner, Assistant Secretary of State, Elections Division
P.O. Box 136
Jackson, MS 39205
Elections Hotline (800)829-6786
601-359-1350
www.sos.ms.gov*

Presented By: Derrick Cooper
Elections Systems Training Specialist
MS Secretary of State's Office
Phone: 601-359-1343
Email: derrick.cooper@sos.ms.gov
Fax: 601-359-5019



DELBERT ROSEMANN
Secretary of State
