

Election Tips for the TSX

2011 ECAM

January 26-28, 2011

**Presented by:
Madalan Lennep, PMP**




DELBERT HOSEMANN
Secretary of State

Agenda

- I. Election Prep Tips**
- II. Election Prep/Election Day Tips**
- III. Election Night Tips**
- IV. Questions/Answers**



DELBERT HOSEMANN
Secretary of State

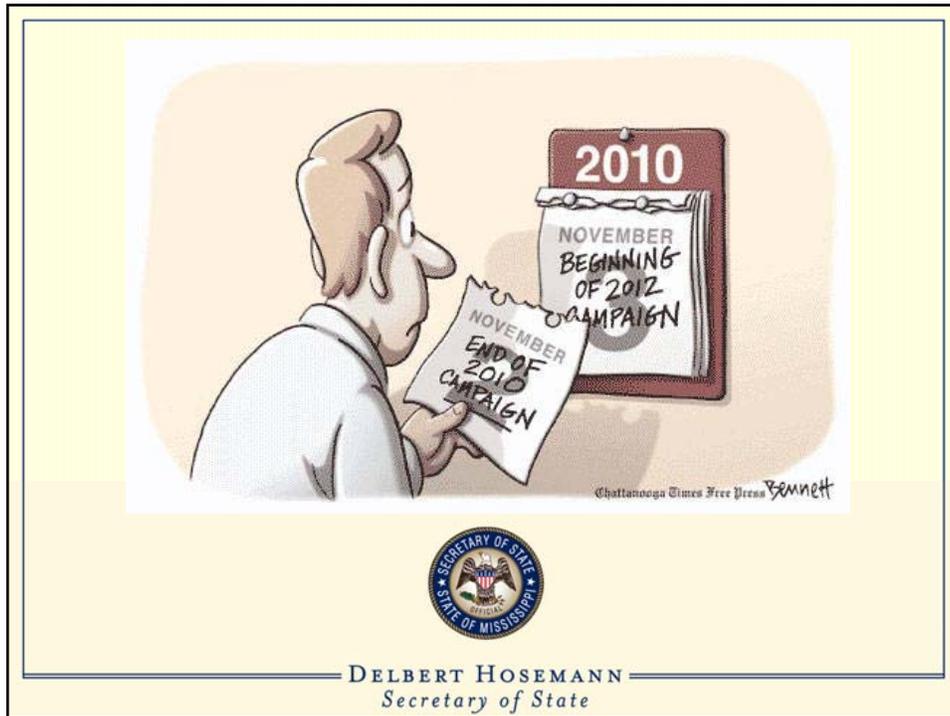

Election Prep

Clear everything before you start:

Make sure memory cards and voter access cards are cleared before beginning your Election Load process.



DELBERT HOSEMANN
Secretary of State

Election Prep

GEMS Download:

When downloading memory cards, select and complete one precinct at a time. This allows you to watch to make sure the label matches the information on the AccuVote Server window.



DELBERT HOSEMANN
Secretary of State

Election Prep

TSX memory card will not work in TSX machine:

- Security keys do not match.
- Reformat TSX memory card using a laptop.
- Memory card is bad, call ES&S to confirm.



DELBERT HOSEMANN
Secretary of State

Election Prep

Encoder display reads Wrong Media Key:

- Updated security keys to match the TSX. By using the Supervisors Card. (Make sure you clear all old voter access cards prior to updating security keys).



DELBERT HOSEMANN
Secretary of State

Election Prep

During L&A:

- Jobs are broken down to an assembly line process.
- If time is changed, press Apply and then go back to verify.
- Make sure you test all encoders for the precinct.



DELBERT HOSEMANN
Secretary of State

Election Prep

Poll Managers Notebook

- Forms/Poll Managers Guide
- Contact Names and Numbers
- Address Library list
- Trouble-shooting section



DELBERT HOSEMANN
Secretary of State

Prep/Election Day

TSX calibration is off:

- Clean screen using an electronic solution.
- Go into System Setup with CA card. Go to Display Settings and recalibrate.
- If machine still will not hold calibration, call the ES&S help desk.



DELBERT HOSEMANN
Secretary of State

Prep/Election Day

TSX printer will not work:

- Make sure smoky gray cover is closed all of the way (listen for click).
- Make sure paper is installed properly. (Thermal paper only prints on one side).



DELBERT HOSEMANN
Secretary of State

Election Day

Check the power lights on the TSX:

- Top Green light shows A/C Power
- Middle blue light shows machine is on
- Bottom flashing light – yellow means battery is charging and green means battery is charged.



DELBERT HOSEMANN
Secretary of State

Election Day

TSX on battery power may not recognize the memory card:

- You may need to restart the TSX with the memory card in and A/C power connected.



DELBERT HOSEMANN
Secretary of State

Election Day

Location of the Poll Managers providing Voter Access Cards:

- There must be a connection between the voter signing the Receipt Book and the poll manager issuing the card.
- Do not create Voter Access Cards in advance.



DELBERT HOSEMANN
Secretary of State

Election Day

Voter is not in the poll book:

- This voter cannot vote on the TSX
- This voter cannot vote on a REGULAR paper ballot.



DELBERT HOSEMANN
Secretary of State

Election Day

Use of Supervisor Cards:

- Should be placed in sealed envelope with instructions that the envelope should not be opened until 7:00 p.m.
- Inserting a Supervisor Card in an encoder will clear all ballots styles on the Encoder.



DELBERT HOSEMANN
Secretary of State

Election Day

Placement of the TSX machines:

- Machine must be turned to allow privacy for the voter.



DELBERT HOSEMANN
Secretary of State

Election Day

Smart card is stuck in TSX:

- Reboot TSX machines and card should pop out.
- Clean any debris from card using an electronic wipe (while avoiding the metal smart chip).



DELBERT HOSEMANN
Secretary of State

Election Day

TSX 'Freezes-up':

- Remove the seal, power the unit off and then on again (reboot). Reseal and record seal number and reason.

(continued)



DELBERT HOSEMANN
Secretary of State

Election Day

Voting after TSX Reboot:

- Re-insert the Voter Access Card and read the message:
 - Card Already Voted – the ballot was cast before the freeze.
 - Card was Cancelled – re-code the card and allow the voter to continue voting.



DELBERT HOSEMANN
Secretary of State

Election Day

Encoder Screen keeps fading in and out:

- Replace batteries (be careful not to apply too much force when installing the screws that hold the cover).
- Turn the Encoder off when not in use.
- Do not leave card in encoder (even if it is off).



DELBERT HOSEMANN
Secretary of State

Election Night

While closing out the election:

- Remove the memory card as soon as the result tape is printed. With the memory card removed, there are only two options: to Shut Down TSX or go to Election Archives.



DELBERT HOSEMANN
Secretary of State

Election Prep/Election Night

TSX is unable to communication with GEMS:

- Make sure you have a network card installed in the TSX. The cable should go through a hub and then into the back of the GEMS server.



DELBERT HOSEMANN
Secretary of State

Election Night

Don't Panic!

If the Poll Manager presses shutdown on the TSX before all close out procedures are complete, just turn it back on and the system will start back at the place you left off.



DELBERT HOSEMANN
Secretary of State

Questions and Answers



DELBERT HOSEMANN
Secretary of State

Contact Information

SEMS Support Center

1-877-357-SEMS (7367)

sems.support@sos.ms.gov

**Charlie Case
Carrie Boyd
Shequita Lowe
Stephanie McCann
Ruth Stockett**



DELBERT HOSEMANN
Secretary of State